# 48063 – TX DISPLAY ASSEMBLY
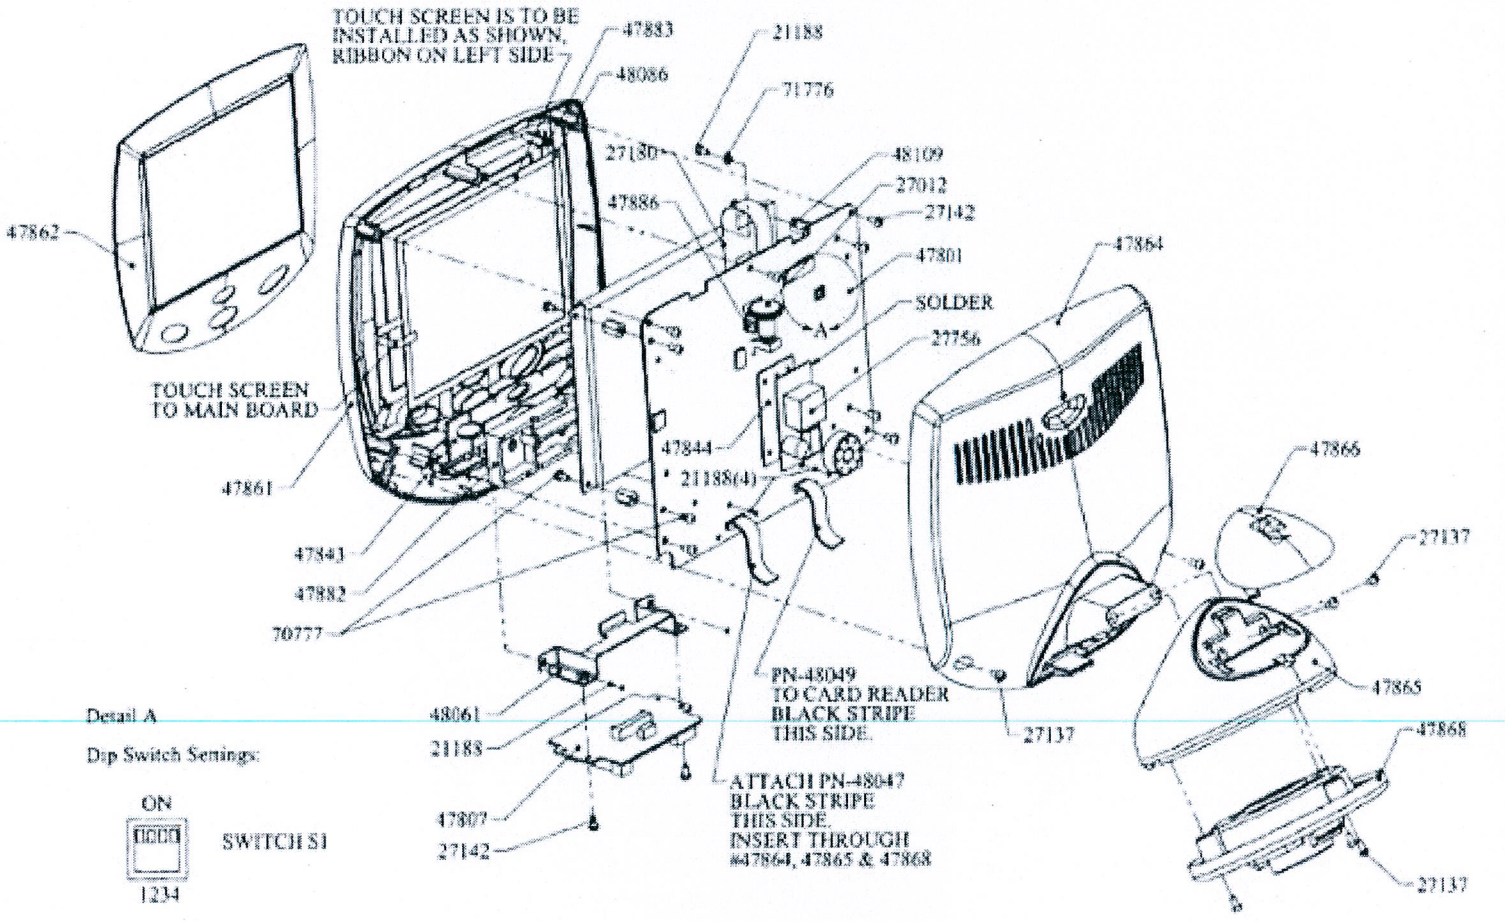
| PN | DESCRIPTION | NOTES |
|---|---|---|
| 27180 | LCD DISPLAY (B/W) | |
| 48086 | TOUCH SCREEN | THIS IS THE PART THAT FITS OVER THE ACTUAL LCD DISPLAY. IT IS NOT PART OF THE LCD DISPLAY. |
| 47801 | PCB TRACTION CONTROL ASSEMBLY | |
| 27756 | LCD INVERTOR BOARD | |
| 48049 | HARNESS CARD READER | NEEDS PRICING |
| 48047 | RIBBON CABLE DISPLAY ASSY | CONNECTS DISPLAY ASSEMBLY TO BASE OF UNIT |
| 48061 | BRKT CARD READER | NEEDS PRICING |
| 47807 | PCB ASSY TRACTION CARD READER | PCB READER INSIDE UNIT |
| 48129 | MMC CARD ASSY | CARD READER MOUTH (NOT SHOWN – ON DISPLAY FRONT) |
| 27024 | CARD TOP MULTI-MEDIA EPR | INFILL FOR MMC SLOT |
| 47863 | BEZEL DISPLAY | NEEDS PRICING |
| 47861 | DISPLAY FRONT | NEEDS PRICING |
| 47864 | DISPLAY BACK | NEEDS PRICING |
| 47865 | DISPLAY BASE | NEEDS PRICING |
| 47867 | DISP BASE COVER | NEEDS PRICING |
| 47868 | DISPLAY PIVOT | NEEDS PRICING |