Setting Solenoid Gear in Traction Units
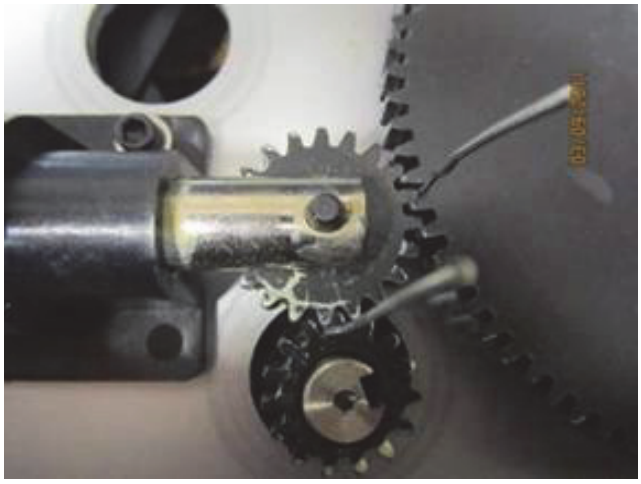
Here are the images for setting the gap on the gears, using a large paper clip between each set of gears. If the gears are too tight, the machine will show an error code of 122 (not in Service Manual).